


**FUEL PRESSURE GAUGE and SENDER**  
**Model # LMFP, LMFPW, LMFP90, LMFP90W**  
**Installation Instructions**

1. Disconnect battery cable.
2. The gauge requires a 2 5/8" diameter hole in the instrument panel. Install gauge, making proper ground connection from the center terminal, terminal " - " of the gauge to the battery ground.

**CAUTION:** Do not use the mounting post for a ground - use terminal " - "

3. Install sender. The sender has two interchangeable terminals. One goes to the negative (-) side of the battery as a ground, this is very important. **A GOOD GROUND IS IMPERATIVE.** The other terminal post on the sender goes to the gauge terminal marked "S".
4. Connect a wire from the ignition switch to the terminal post " + " on the gauge.
5. Reconnect battery cable.

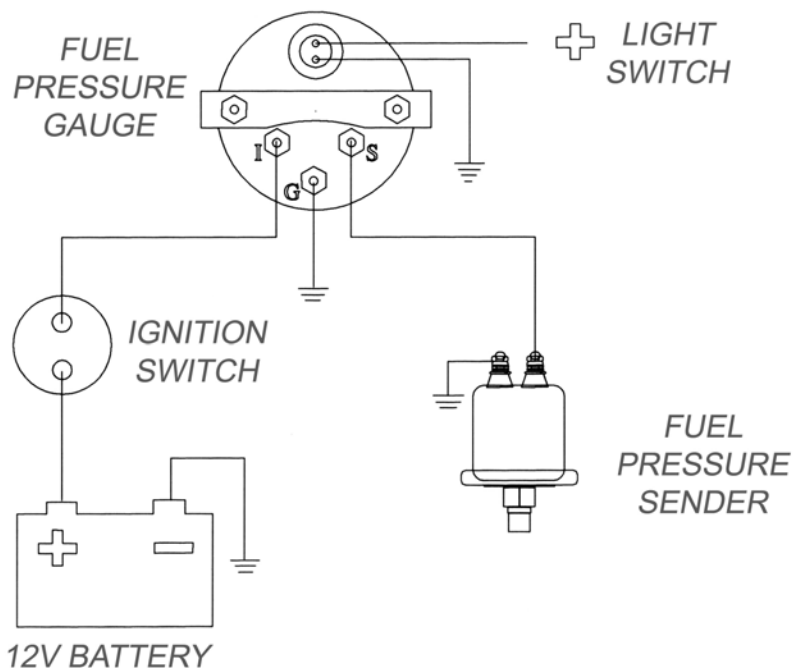

LMFP.WPD