

Trim Tab Installation with Electronic Sensors

Model Number: TTK750EM, TTK850EM, TTK950EM, TTK1050EM, TTK1150EM

Parts Included

- (2) Trim Tabs with Sensors
- (2) Hydraulic Pumps
- (2) Mounting Templates Harnesses - TTMWH & (2) - TTIWH Mounting Hardware


Stainless steel hoses sold separately- 2 hoses required per tab

Mounting Tab Location

Available mounting area:


Before selecting a mounting location verify proper clearances inside (transom mounted components, etc) and outside (turning drive and propeller clearance) of the boat. **Do not** mount tabs in the chine area.


NOTE: The farther the tabs are between each other the better, this will allow you to achieve the maximum performance out of your tabs.

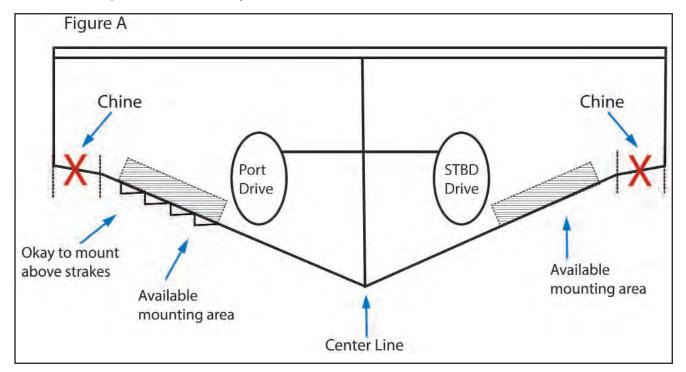


Mounting tab location cont.

Transition of the hull to tabs:

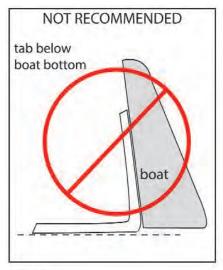

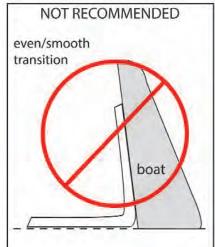

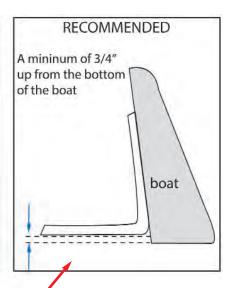

REV A

Recommended Transtion:

Allows tab to be removed fully from the water flow underneath the boat while under way. Some applications may require the tab to be mounted even higher to be out of the water flow.


Using the template:

Once the location is determined use the supplied template for drilling holes.

The template is **15" by 19"**, scale is 1:1. Please note, you might need to **visit your nearest office supply store** to have this large scale template printed correctly. Do not try

printing this on any size paper smaller than **15"x19"**. It is very important it is printed to scale.

Please contact sales@livorsi.com if you would like this template mailed to you.

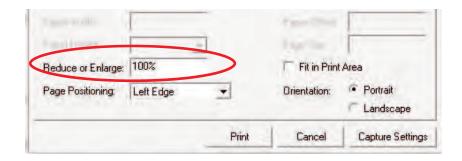

NOTE: PORT AND STARBOARD TEMPLATES ARE DIFFERENT

21/32" THRU Bulk Head fitting 21/32" THRU 21/32" THRU Bulk Head fitting 21/32" THRU Bulk Head fitting 414 514" bottom plate area

Example of the 950 Mercury bolt pattern

Depending on your tab model, if equipped with an electric sensor, only drill one hole for the wire access thru the transom.

Billet Trim Tab Installation

Mount the tab:

If the Livorsi Trim Tabs are replacing existing tabs, make sure to seal any unnecessary holes on the transom. Use a high quality marine sealer suitable for underwater use.


Recommended sealant: Marine Grade RTV / silicone sealant 4200 or 5200.

Use this same sealer and apply liberally around each fastener, indicator wires and between transom and upper trim plate. It is recommended to apply the same sealant to the inside of the boat.

You may want to apply a piece of tape to the ends of the hydraulic thru hull fittings to prevent debris from entering the openings.

If equipped with the electronic sensor carefully feed the sensor wires thru the transom.

Secure all mounting hardware.

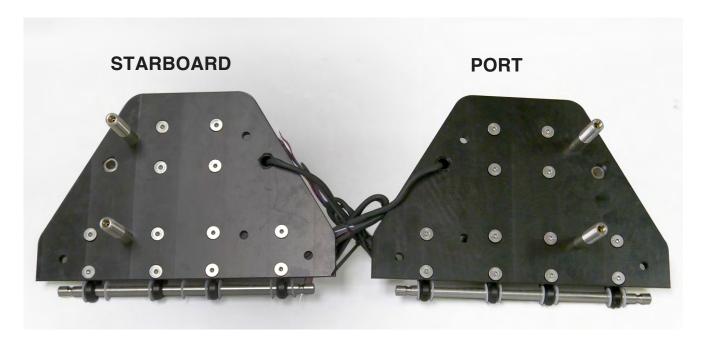

Installing the pumps and hydraulic lines:


Select the location to mount the hydraulic pumps.

NOTE: Keep pumps as level as possible.


Once mounted, route the hydraulic lines from the tab to the pump. Make sure hydraulic lines are routed and secured away from any moving components in the boat..




24 VOLTSee page 6 for wiring diagram

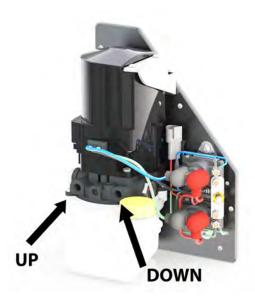


12 VOLTSee page 7 for wiring diagram

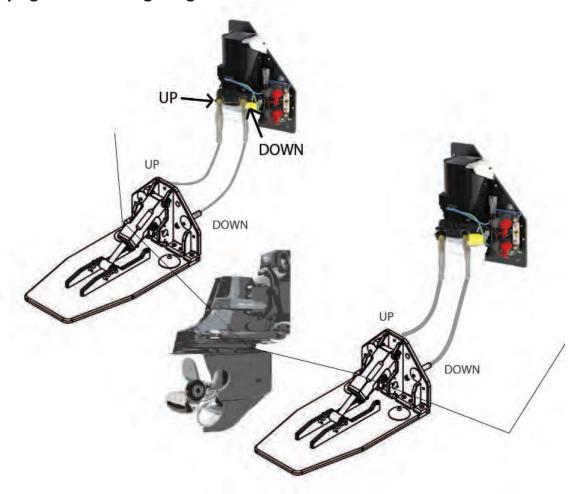

24 VDC Trim Pump Wiring Diagram

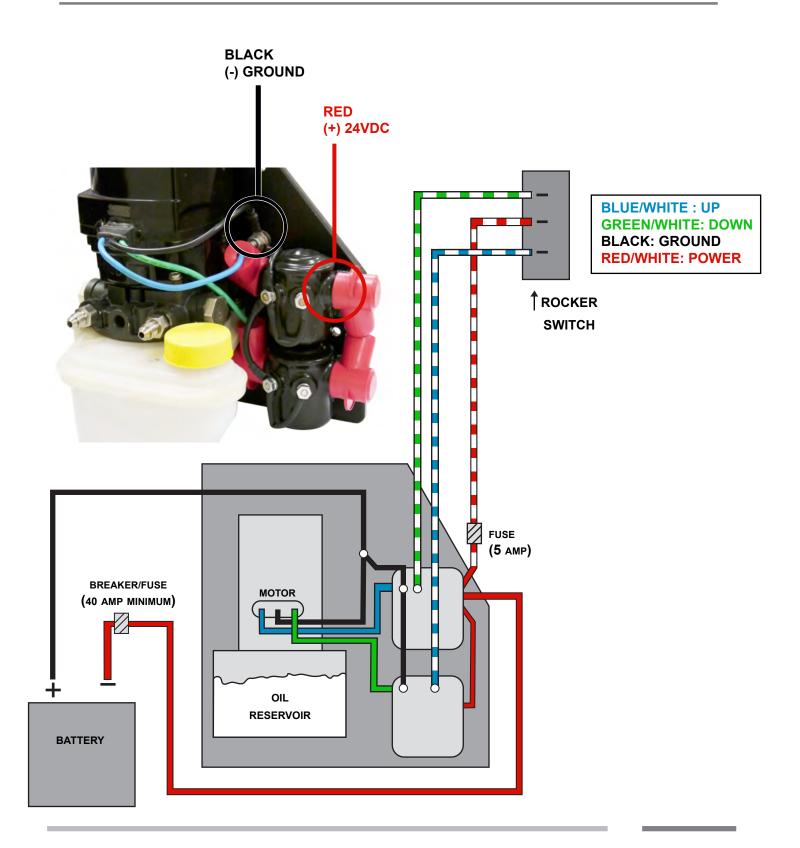


12 VDC Trim Pump Wiring Diagram

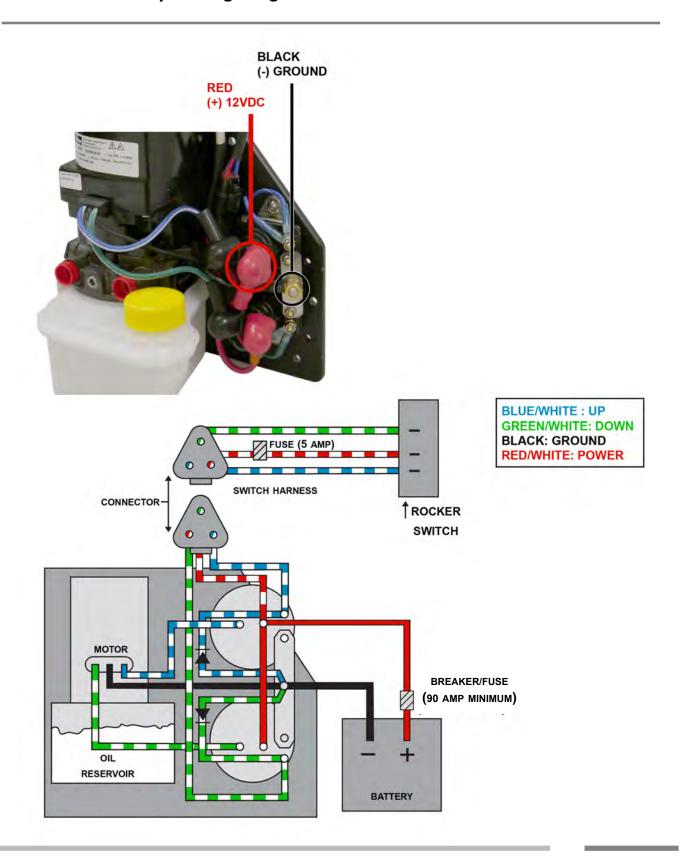

Sensor Wiring

The sensor wire leads that were fished thru the transom will need to be inserted in to the 6 pin Deutsch connector and secured with a wedge lock. Below is the pin out.

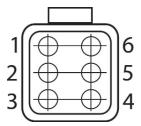

Pin Number	Wire Color	Description
1	Red	PPS1 (5V)
2	White	PPS2 (5V)
3	Blue	PPS1 Signal
4	Black	PPS1 Ground
5	Green	PPS2 Ground
6	Tan	PPS2 Signal







sensor wires from trim tab


Once pins are pushed thru the connector, insert the wedge lock to secure pins.

The "arm" of the wedge lock should face the same side as the connector clasp.





wedge "arm"

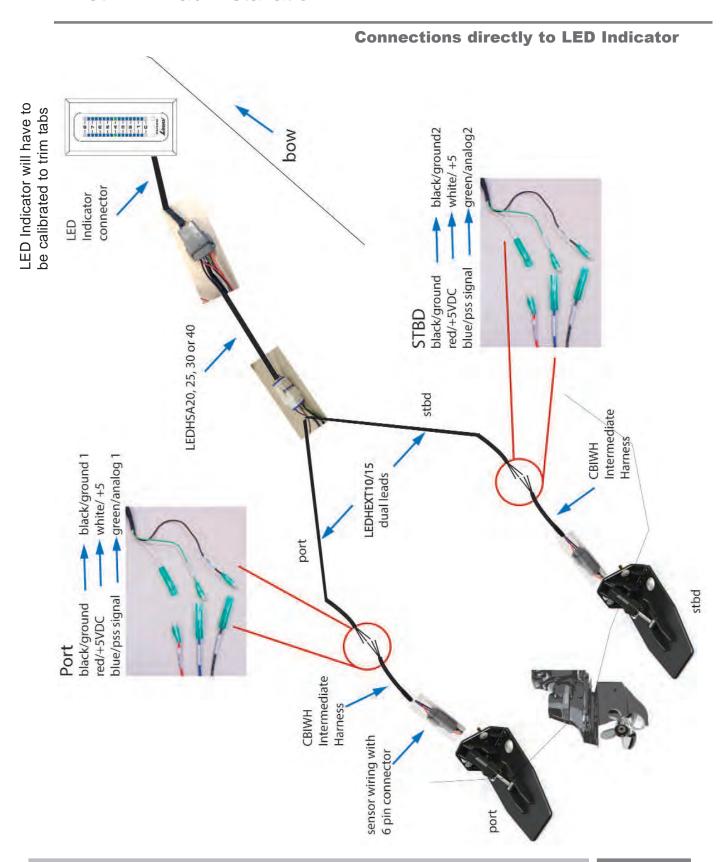


Connections to a Mercury VesselView® VesselView® black/ground -green/analog purple/+5 bow VeseelView® will have to be calibrated to trim tabs blue/pss1 signal Merc Engine black/ground red/+5VDC Harness STBD stbd **TTMWH Merc** harness w/ dual leads black/ground green/analog purple/ +5 port blue/pss1 signal black/ground red/+5VDC Port Intermediate Harness sensor wiring with 6 pin connector port


Billet Trim Tab Installation

Fill the pump with oil:

The pump reservoir has markers indicating the maximum and minimum oil levels.

The operating temperature and the oil used will determine the reaction speed of the tabs.

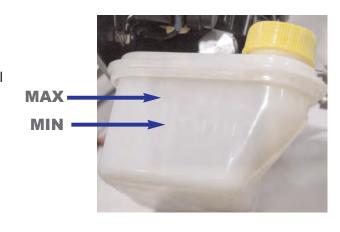

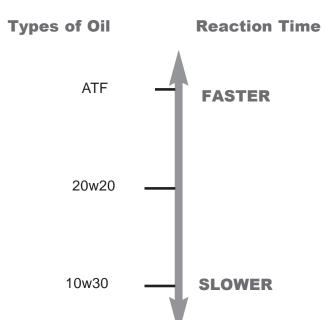

Testing:

The hydraulic system will be full of air, the system is designed to self purge this air when the tabs are raised and lowered.

Purging Air

Before testing the system ensure the pump is filled with oil to the MAX level line.


To purge, fully raise and fully lower the tabs 3X times.


Check the oil level and inspect all hydraulic components for leaks.

Repeat fully raising and fully lowering of the tabs until operation is smooth.

NOTE: While purging the oil will foam (inducing air), allow to sit for 24 hours, fill as needed.

Check all hydraulic fittings for leaks (Livorsi plate shown below)

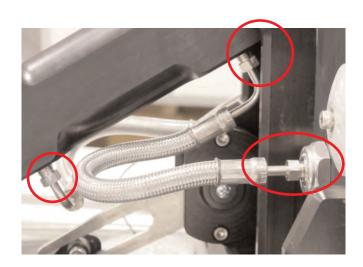

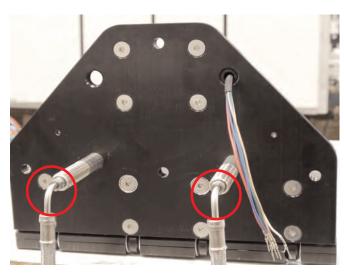










1050 Trim Tab Angles - Pin location 1 For reference only

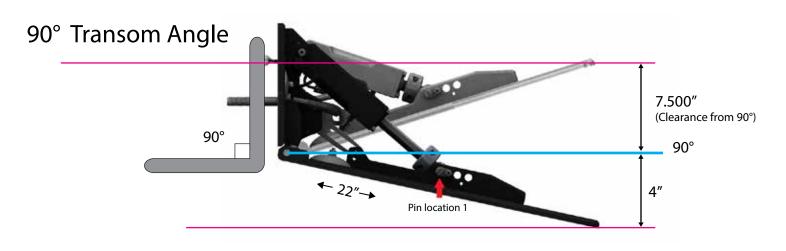

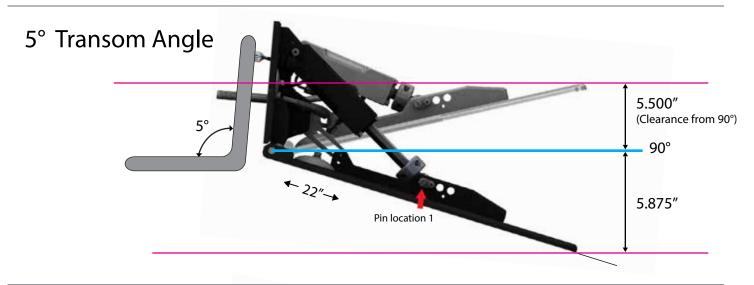


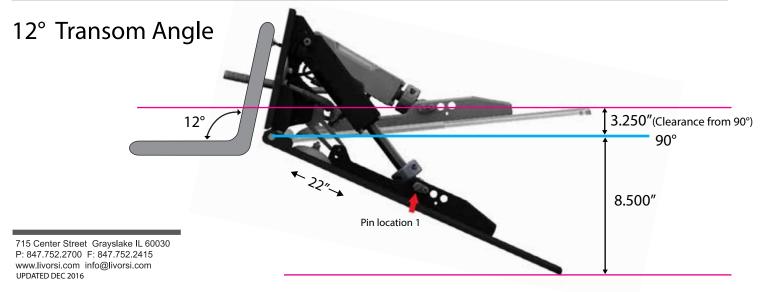



NOTE: IF EQUIPPED WITH UNDERWATER LED ACCESSORY LIGHTING, ADDITIONAL CLEARANCE NEEDED.. NOT TO SCALE.



1050 Trim Tab Angles - Pin location 2 For reference only

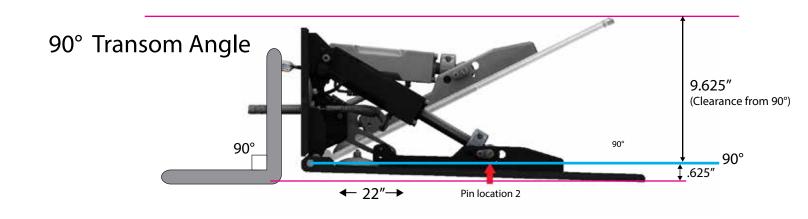

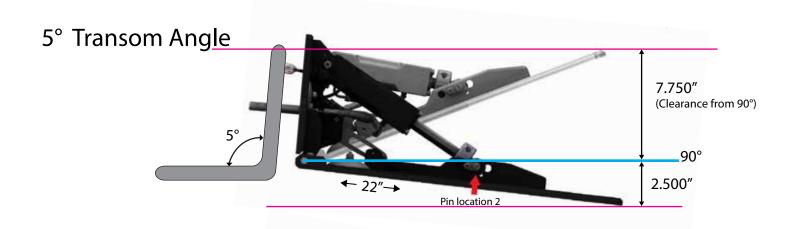

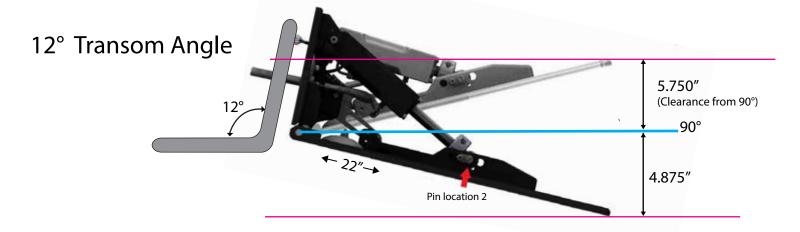



715 Center Street Grayslake IL 60030 P: 847.752.2700 F: 847.752.2415 www.livorsi.com info@livorsi.com UPDATED DEC 2016


NOTE: IF EQUIPPED WITH UNDERWATER LED ACCESSORY LIGHTING, ADDITIONAL CLEARANCE NEEDED..
NOT TO SCALE.



1050 Trim Tab Angles - Pin location 3 For reference only

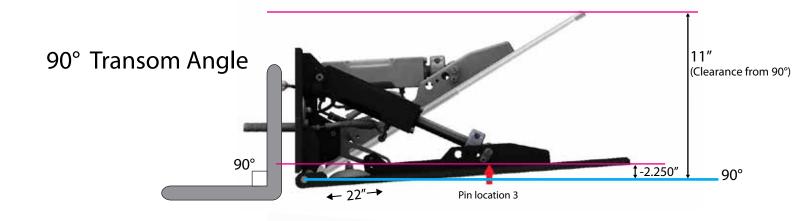

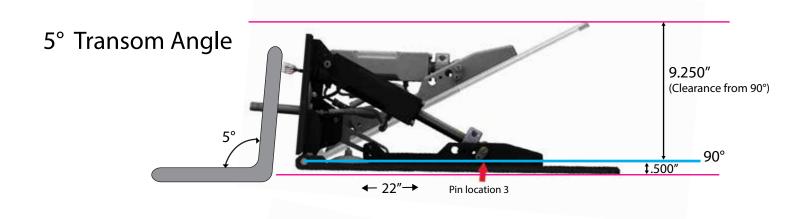

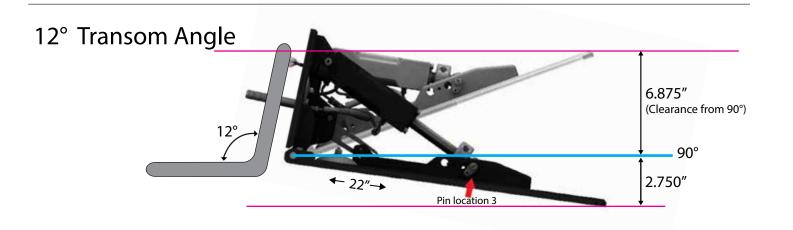

715 Center Street Grayslake IL 60030 P: 847.752.2700 F: 847.752.2415 www.livorsi.com info@livorsi.com UPDATED DEC 2016

NOTE: IF EQUIPPED WITH UNDERWATER LED ACCESSORY LIGHTING, ADDITIONAL CLEARANCE NEEDED.. NOT TO SCALE.



1050 Trim Tab Dimensions

