


SCM-10 Installation Diagram

LIT-LED-UWL-4610-INST

REV A

ECO 28610

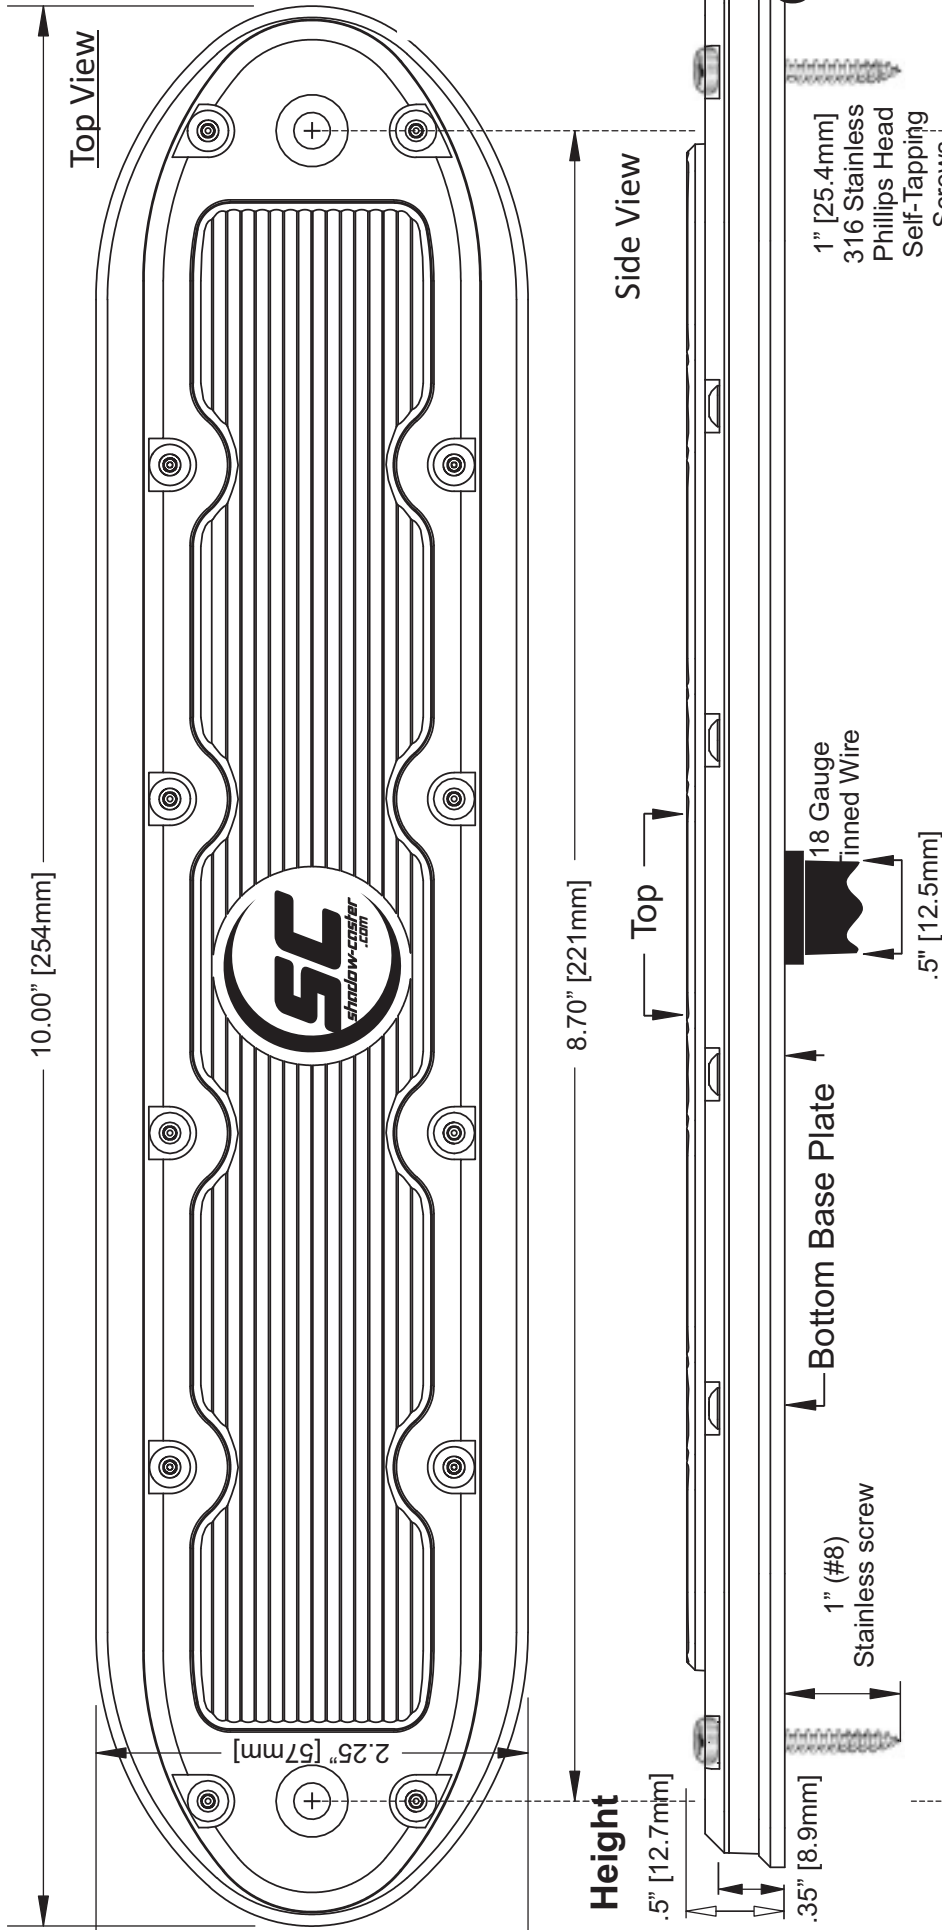

PLEASE READ INSTRUCTIONS INSIDE TEMPLATE

FOR CENTER WIRE HOLE USE THE FOLLOWING:

DO NOT USE TEMPLATE TO MARK SCREW HOLES

- 1st - DRILL PILOT HOLE AT CENTER FOR THE WIRE, THEN USE 5/8" DRILL ALL THE WAY THROUGH


WHEN PRE-DRILLING SCREWS:
 FIRST PRE-DRILL CENTER HOLE AND RUN WIRE. THEN MARK YOUR SCREW HOLES WITH DRILL BIT OR PENCIL WHILE USING ACTUAL LIGHT HOUSING

Scale 1:1 (If in doubt ask)

DO NOT USE TEMPLATE TO MARK SCREW HOLES

WHEN PRE-DRILLING SCREWS:
 FIRST PRE-DRILL CENTER HOLE AND RUN WIRE. THEN MARK YOUR SCREW HOLES WITH DRILL BIT OR PENCIL WHILE USING ACTUAL LIGHT HOUSING

SCM-10™
Typical Power Requirements
3.5 Amps@12v

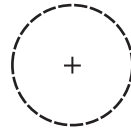

- 2nd - RUN WIRE THROUGH THE HOLE AND MARK ONE MOUNTING HOLE LOCATION
- 3rd - FOLLOW STEPS ON FRONT OF SHEET FOR DRILLING MOUNTING HOLES

TAPE HERE

TAPE HERE

TAPE HERE

TAPE HERE