


VOLTMETER Model # LMVM, LMVMW Installation Instructions

WIRING:

1. Remove battery cable.
2. This voltmeter requires 2 5/8" diameter hole in the instrument panel.
3. Gauge should be wired as shown below using 16" or 18" gauge wire.
4. Reconnect battery ground cable.

NOTE: 3rd stud on gauge is not used

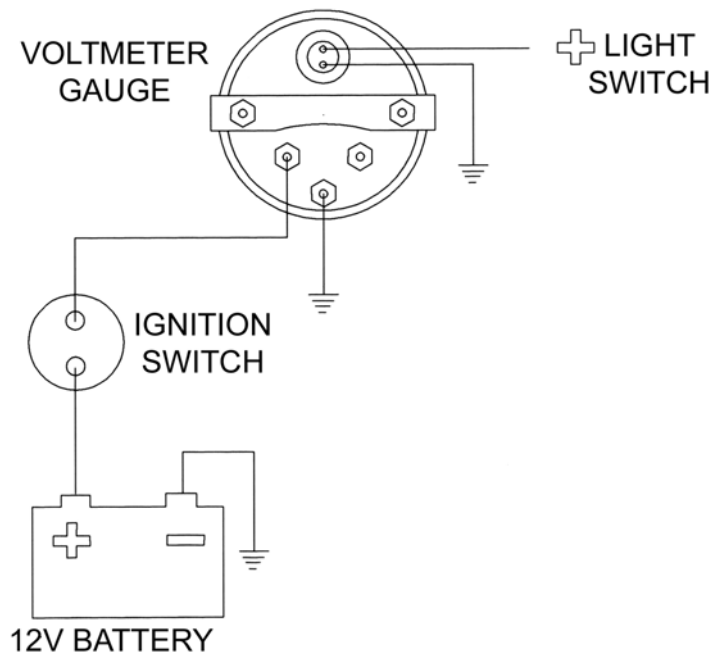

LMVM.WPD