


Proper Installation for Mega & Race Plug-In Connectors




STEP 1: Insert the plug

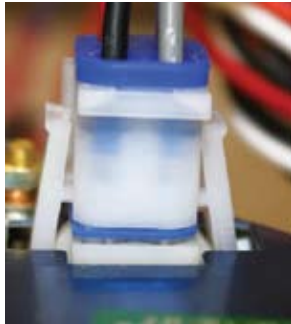

Not Connected


STEP 2: Push the plug in , you will hear a click.

Note the two locking tabs on the either side of the plug are resting at angles.

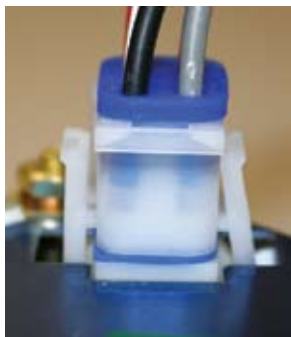

Not Connected

STEP 3: Push to one side of the plug, so that the locking tab clicks into a vertical position as shown here.

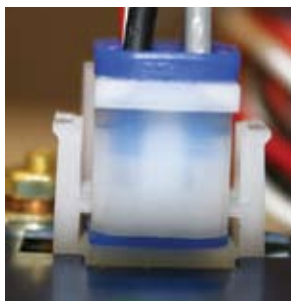

Proper Connection

STEP 4: Push toward the other side so that the remaining locking tab clicks into a vertical position.

Both locking tabs should be in a vertical position.

The plug is now properly secured.