

5" Livorsi Tach / Hourmeter Model LIISE7000H

WARNING


Improper installation may damage the instrument and/or cause injury to the installer. If you have installation questions, please contact the factory.
 Disconnect battery cables before installing the instrument.
 Check for obstructions behind dash panel such as wires and hoses before cutting the mounting hole for the instrument.

MOUNTING



Recommended dash hole size: 4.65-.02 in (118.10-0.05 mm) DIA.
 Secure the instrument into dashboard with mounting 'U' clamp, lock washers and hex nuts.
 Position instrument in dashboard prior to tightening clamp nuts to recommended torque.
 If dashboard thickness exceeds clamp grip range, clamp legs may be shortened.
 Maximum recommended tightening torque for all hardware: 8 lb-in (0.90 N-m).
 Caution, over tightening mounting hardware may damage the instrument.

MAINTENANCE

Periodically check and torque all hardware per mounting specifications.
 Clean electrical connections if corrosion develops around hardware.
 Clean glass with a soft, damp, clean cloth.

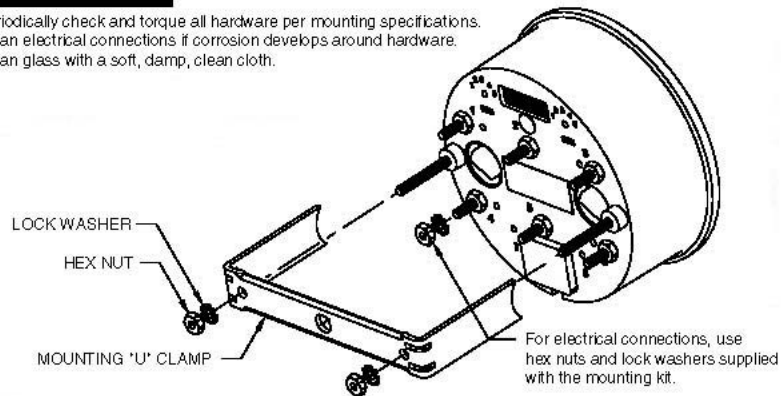


TO STARTER SOLENOID

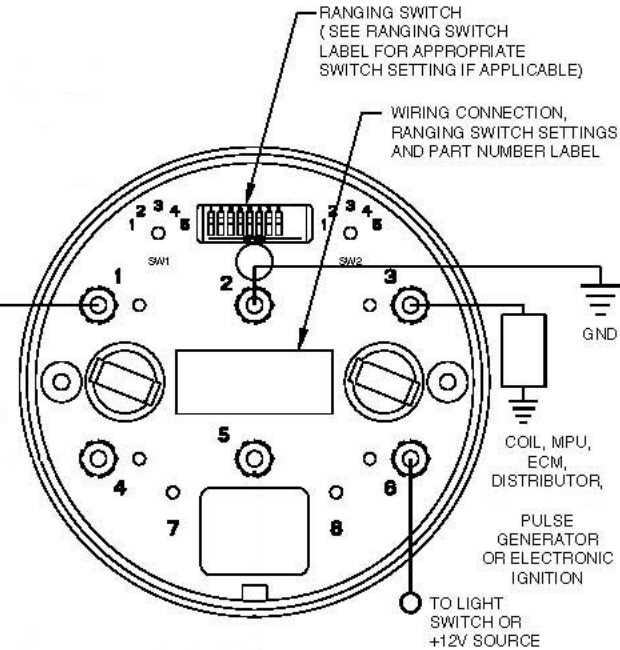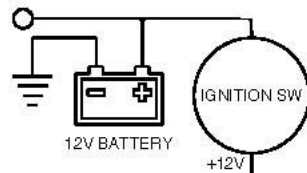

REAR VIEW OF INSTRUMENT

NUMBER OF ENGINE CYLINDERS OR ALTERNATOR POLES	OPEN SWITCH
4	1,2
6	2,3
8	2
10	4,5
12 POLE IS 6 CYLINDER OUTBOARD	4

SWITCH POSITIONS 1 THRU 8 ARE SHOWN IN THE OPEN POSITION

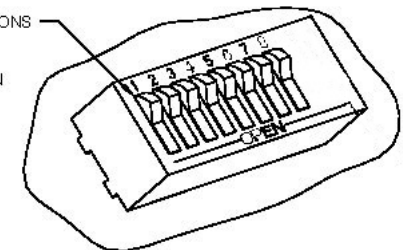

RANGING SWITCH SETTING DETAIL